
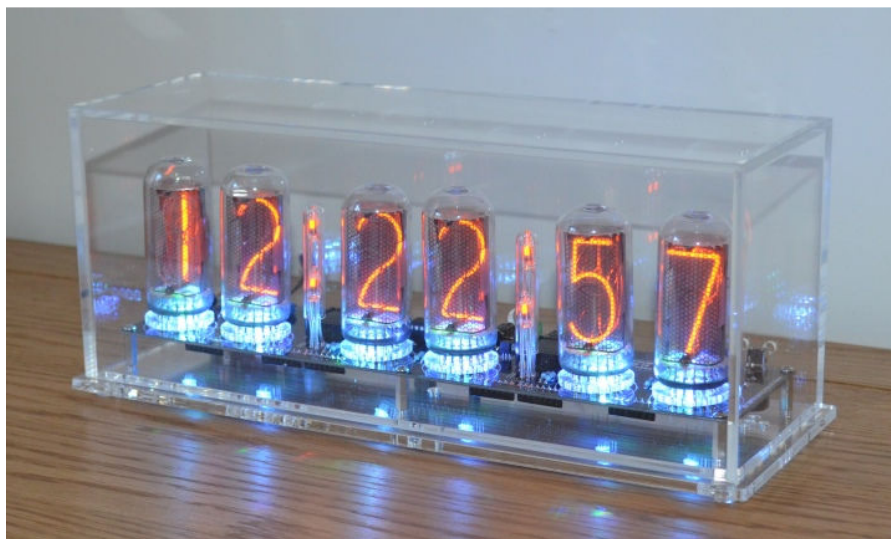


Assembly Instructions And User Guide

Nixie Clock Type 'Spectrum 18' 'Spectrum 1040'

**For Parts Bag Serial
Numbers from 800 to 1499**

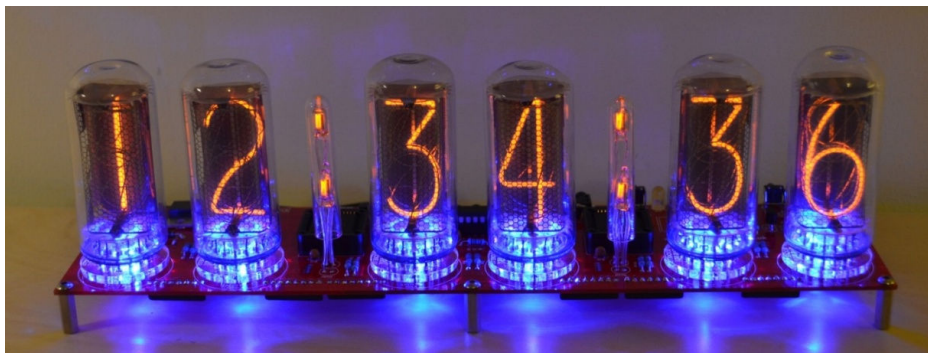

REVISION HISTORY

Issue Number	Date	Reason for Issue
6	20 July 2016	Specifics for new Stainless Steel Case
5	15 October 2015	New PCB Dated 1 Oct 15 Alarm Aux removed HV Disable Pads removed For firmware V2.0 onwards
4	20 August 2015	Minor errors corrected
3	1 June 2015	Changed resistor values
2	15 Feb 2015	Errors in Resistor values corrected Resistor networks not polarized
1	10 Feb 2015	New document

1. INTRODUCTION

Here are the key features of the SPECTRUM 18 / 1040:

- Hours, Minutes and Seconds display
- 40mm (1.5") Digit height (Spectrum 18)
- 30mm (1.2") Digit height (Spectrum 1040)
- Noiseless, Direct Drive giving optimum digit clarity
- Dedicated, plug-in High Voltage Module (Included)
- Uses a Quartz Crystal Oscillator as the timebase
- 12 or 24 hour modes
- Programmable leading zero blanking
- Date display in either DD.MM.YY or MM.DD.YY or YY.MM.DD format
- Programmable date display each minute
- Scrolling display of date or standard display
- Alarm, with programmable snooze period
- Optional DCF / MSF / GPS synchronisation with status indicator LED
- Dedicated DST button to switch between DST and standard time
- Supercapacitor backup. Keeps time during short power outages
- PIR Motion Sensor input and accessory available. Configurable timeout period
- Temperature display in Celsius or Fahrenheit. Configurable. (every minute/ every 10 minutes / every hour)
- Simple time setting using two buttons
- Programmable leading zero blanking
- Double dot colon neon lamps
- 11 colon neon modes including AM / PM indication (top / bottom or left / right), railroad (slow or fast) etc.
- Seconds can be reset to zero to precisely the set time
- Programmable night mode - blanked or dimmed display to save tubes or prevent sleep disturbance
- Rear Indicator LEDs dim at night to prevent sleep disturbance
- Weekday aware 'Master Blank' function to turn off HV/ tubes and LEDs on weekends or during working hours
- Separate modes for colon neons during night mode
- Standard, fading, or crossfading with scrollback display modes
- 'Slot Machine' Cathode poisoning prevention routine
- Programmable RGB tube lighting – select YOUR favourite colour palette
- 729 colours possible. Have a different colour or your choosing every hour, or autochanging colours
- Provision for adding switch for independently switching off RGB LEDs
- Not AC frequency dependent – works in all countries
- All user preferences stored to non-volatile memory

1.4 SAFETY

DANGER: The clock pcb includes a switched-mode voltage booster circuit. This generates nominally 170 Volts DC. Assembly may only be undertaken by individuals who are suitably qualified and experienced in electronics assembly, and are familiar with safe procedures for working with high voltages. If in doubt, refer to a suitably qualified engineer before proceeding.

The voltages generated by this circuit can give a potentially LETHAL ELECTRIC SHOCK.

DISCLAIMER: This product is supplied as a kit of parts, intended only for suitably qualified electronic engineers, who are suitably qualified and experienced in electronics assembly, and are familiar with safe procedures for working with high voltages. The supplier, his agents or associates accept no liability for any damage, injury or death arising from the use of this kit of parts.

This is not a finished product, and the person assembling the kit is responsible for ensuring that the finished product complies with any applicable local regulations governing electrical equipment, eg. UL, CE, VDE.

2. TOOLS AND EQUIPMENT REQUIRED

2.1 Tools required to assemble the PCB.

The following tools will be required to assemble the PCB:

- Soldering iron with a small tip (1-2 mm).
- Wire cutters to trim the excess component leads after soldering.
(TIP: A small pair of nail clippers works very well for this function).
- Wire strippers (TIP: A small pair of scissors is quite suitable).
- Multimeter for voltage tests and for identifying the resistors.
- A small hot air gun will be needed to shrink the heat shrink tubing over the neon lamp wires.

2.2 Materials you will need.

Solder – lead / tin solder is highly recommended.

USE LEAD/ TIN SOLDER!

Lead free solder, as now required to be used in commercial products in Europe, has a much higher melting point and can be very hard to work with.

Desoldering wick (braid) can be useful if you accidentally create solder bridges between adjacent solder joints.

2.3 Other items you will need.

The clock kit does not include a power adapter.

The following type of adapter should be obtained and used with the kit:

Output 12V DC regulated, minimum power output capability of 1A

Output plug: 2.1mm pin, centre positive.

A suitable adapter is shown below:



3. LIST OF COMPONENTS

3.1 Table of Components – Driver Board

Circuit Designation	Part Description
Resistors	
R1	6.8 K Ω , ¼ Watt
R2 – R7	8.2 K Ω , ¼ Watt
R8 – R11	270 K Ω , ¼ Watt
R12 – R14	270 Ω , ¼ Watt
R16	10 K Ω , ¼ Watt
R17 – R19	270 Ω , ¼ Watt
R20	1 K Ω , ¼ Watt
RN1 – RN6	Quad Resistor Network, 220 Ω
Capacitors	
C1, C2	220uF Electrolytic 16-25V
C3	10pF Ceramic
C4	15pF Ceramic
C5	100nF Ceramic
C6	0.1F or 0.22F Supercapacitor
C7 – C9	100nF
Transistors	
Q1	MPSA42
Q2 – Q4	2N7000 MOSFET
Diodes	
D1 – D3	1N5819
D4	5mm Yellow LED
D5	5mm Green LED
D6	5mm Yellow LED
RGB1 – RGB8	RGB 5mm LED, common anode
Integrated Circuits	
IC1	LM2576 5V voltage regulator
IC2	PIC16F1938 in socket
IC3, IC4	HV5622 in socket
IC5	DS18B20
Miscellaneous	
L1	100uH inductor
AM1, PM1, AM2, PM2	4mm wire ended neon lamp
ALARM, SET, ADJ, DST	Miniature push button
IC2 Socket	28 Way narrow IC socket for IC2
IC3, IC4 Socket	PLCC44 IC socket for IC3
J1 (12V IN Socket)	2.1mm PCB power socket
GPS / RFT and GPS2	Surface mount 3.5mm jack socket
PIR and PIR2	Surface mount 3.5mm jack socket
LS1	Piezo sounder
FUSE	500mA fuse
VR1	1K Ω Potentiometer
X1	32.768KHz watch crystal
HV Module	High Voltage Module in header

3.2 Parts list / Packing Sheet - Component Bag

Part Description	Quantity
Resistors	
270 Ω , ¼ Watt	6
6.8 K Ω , ¼ Watt	1
8.2 K Ω , ¼ Watt	6
10 K Ω , ¼ Watt	1
1K Ω , ¼ Watt	1
270 K Ω , ¼ Watt	4
220 Ω Resistor Network	6
Capacitors	
10pF, Ceramic	1
15pF, Ceramic	1
100nF, Ceramic	4
220uF, 16-25V, Electrolytic	2
0.1F or 0.22F	1
Transistors	
MPSA42	1
2N7000 MOSFET	3
Diodes	
1N5819	3
5mm Green LED	1
5mm Yellow LED	2
5mm RGB LED	6
Integrated Circuits	
LM2576 5V voltage regulator	1
PIC16F1938 8-bit microcontroller	1
HV5622	2
DS18B20	1
Miscellaneous	
100uH inductor	1
4mm wire ended neon lamp	4
Miniature push button	4
28 way narrow IC Socket for IC2	1
PLCC44 IC Socket	2
2.1mm PCB power socket	1
Surface mount 3.5mm jack socket	2
Piezo sounder	1
1A fuse	1
1K Ω Potentiometer	1
2 way header with jumper	1
6 way female header 0.1"	1
32.768KHz watch crystal	1

3.3 Parts list / Packing Sheet - Additional parts

- PCB
- 6 X 15mm M3 hex spacers with screws
- HV Module with male header and glue dot
- 2 X Glass neon covers
- 30cm Clear heat shrink insulation for neons
- 6 X Socket holders and 66 sockets

The resistors used in the kit are 1% tolerance metal film. They are marked with 4 coloured bands to identify the value. However it is sometimes unclear in which direction the bands should be read.

Therefore, we recommend that the resistors be identified with a multimeter.

Please note the fuse will look like one of the pictures below. It can easily be confused for a capacitor. It is a self-resetting fuse.



3.4 SPECIAL NOTE - IMPORTANT:

Please note that several components can be possibly mounted on either side of the PCB, and white component print for the part is on both sides of the PCB. This is to offer maximum flexibility of the kit: For our clear cases, most components will be soldered on the top (tube) side of the PCB, so they are visible on the finished clock.


However, for the Viso case and for customers making their own case, it is possible to mount some of the taller components on the bottom of the PCB, so that the PCB can fit inside a case with the tubes protruding. Please follow carefully the instructions. Unless specified otherwise, please solder all components on the top of the PCB.

4. ASSEMBLY OF THE PCB


DUE TO PRODUCT DEVELOPMENT AND IMPROVEMENTS, YOUR PCB MAY NOT LOOK EXACTLY LIKE THE ONE PICTURED.

4.1 Assembly of the tube sockets

Remove the protective film from both sides of the six laser-cut tube socket holders and identify the side that is engraved 'SOCKETS THIS SIDE' or simply 'SKT'.

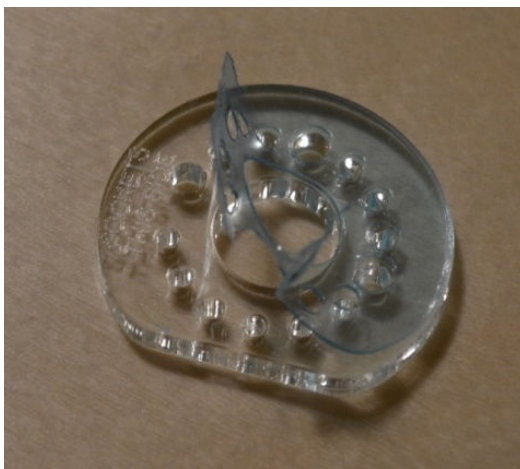

For each socket holder, you need to push in 11 socket receptacles. Push them in from the 'SOCKETS THIS SIDE' side. Push them with the 2 open jaws going in first. Look at the photo below.

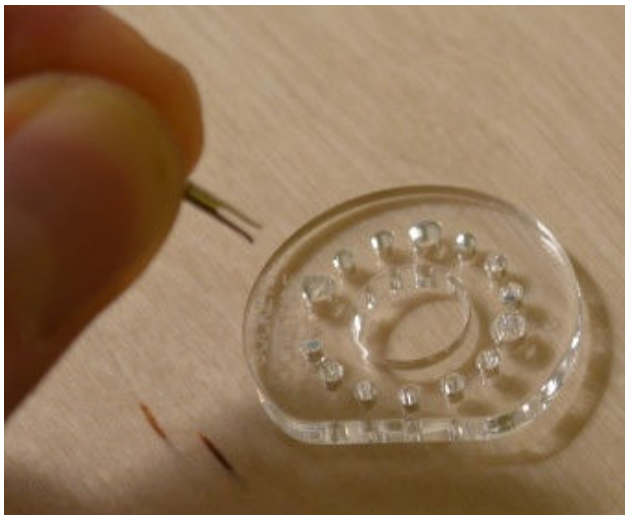

Push all the sockets firmly into place until they stop. You will end up with 6 socket assemblies. Put them to one side. Do not solder them to the PCB yet.




4.2 Resistor Networks RN1 – RN6

Solder the 6 resistor networks on the bottom side of the PCB as shown below. These parts are not polarized, so the orientation does not matter.



4.3 Nixie Tube Sockets.

Now you can solder the 6 Nixie sockets that you assembled in step 4.1. Push each socket assembly into the PCB so that the flat is aligned as shown below. There is only one way the socket can be inserted, so it should be impossible to orient incorrectly. be sure to push the socket fully in, so that the larger diameter portion of the socket receptacles goes into each hole. The plastic socket should be 2-3mm from the PCB.

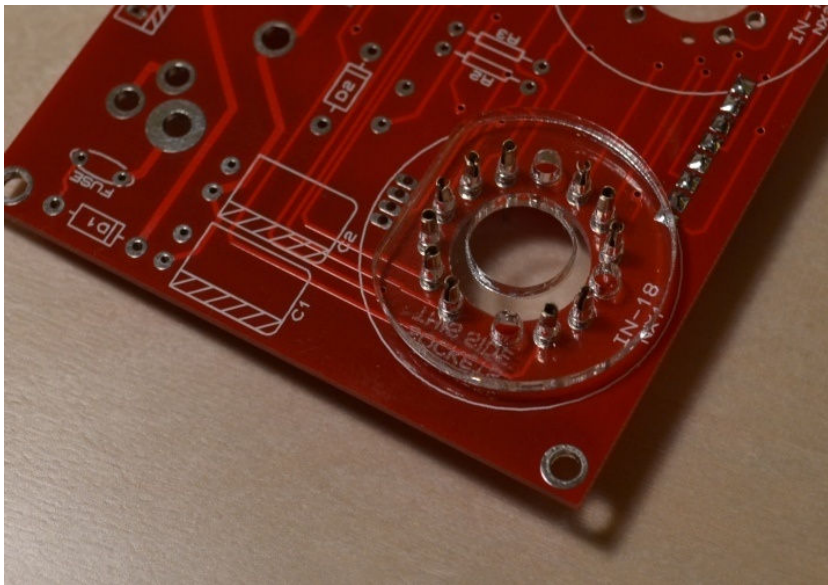

After soldering all 66 contacts, clip off the lower, very thin part of the connector.



4.4 Low Voltage Generator components.

Fuse

D1, D2, D3 (1N5819)

C1, C2 (220uF)

J1 (12V IN), L1


IC1 (LM2576)

Depending on the fuse you have been supplied with, the leads may not fit through the holes. If this is the case, simply wet the 2 pads with solder and pre-cut the fuse leads very short. Solder the fuse leads onto the top of the two wetted pads.

Bend the legs of IC1 to a 90 degree angle so that the component lies along the PCB. Solder it so it does not quite touch the PCB. But is approx 2-3 mm from it. (1/8")


C1 and C2 are polarized. The light stripe on the body of the component indicates the negative side. This must match the cross hatched side on the PCB Marking.

Please note that J1 and L1 must be soldered on the bottom of the PCB in all cases.

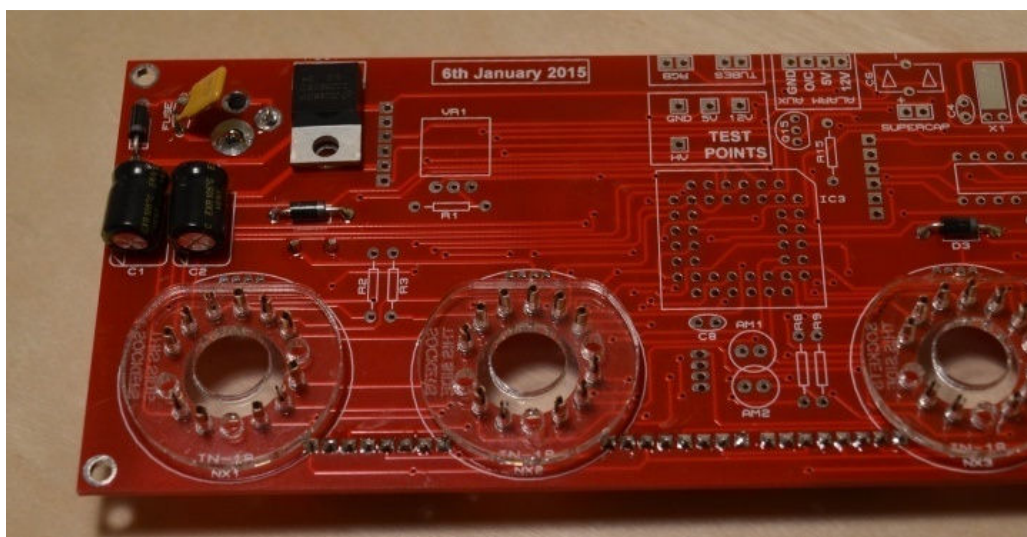

4.5 Testing Low Voltage Power Supply.

Identify the test GND, 5V and HV test points as shown below.

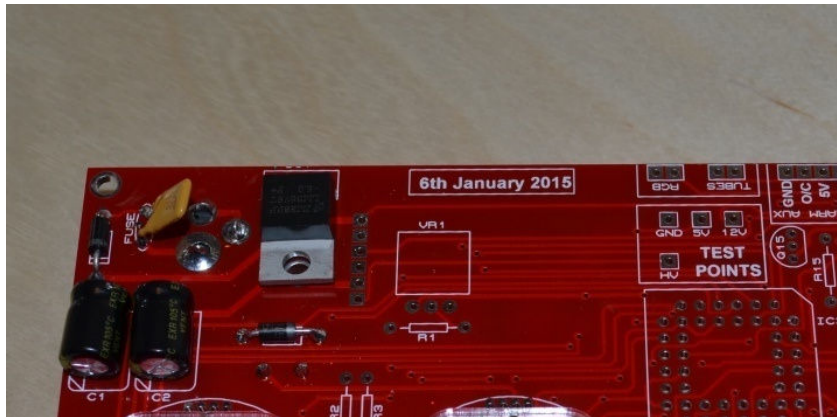

Plug in the power supply, and then test using a DC voltmeter: Touch the black probe on the GND test point and the red probe on the 5V test point. The voltage should measure between 4.8 and 5.2 Volts. If not, disconnect power and check your work. Do not proceed with the assembly until the error is corrected. Once the test is completed, disconnect the power.

4.6 High Voltage Generator Components.

6 Way female header


28 Way IC socket for IC2

R1 (6.8 K Ω)

VR1 (1 K Ω Potentiometer)

HV Module

Start by soldering the 6 way male header to the HV Module.

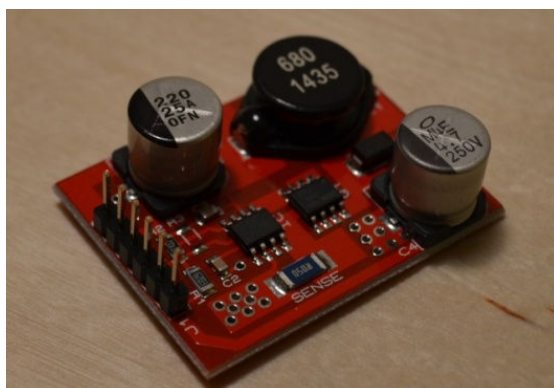

Notched end of socket

Later, at the end of the assembly, when the clock is ready to be put into its case you can use the small adhesive dot on the top of the HV Module's 4.7uF 250V capacitor to stick it to the bottom of the PCB to keep it from moving. Do this later.

4.7 High Voltage Generator Test.

- Refer to the warnings on page 5
- Insert IC2 into its socket. Orient the notch on the IC with the notch on the IC socket and the PCB marking.
- Power up the PCB, and using the GND and HV test points, measure the high voltage generated using a voltmeter on DC setting. Adjust the brass screw on VR1 until the HV is close to 170V.

Disconnect power, and remember that the HV module can still hold charge at 170V. carefully remove the HV module and place it safely away until later.

4.8 Tube Drive Components

R2 – R7 (8.2 K Ω)

C5, C8, C9 (100nF)

Sockets for IC3 and IC4

Be very careful when inserting the two IC sockets. Make sure the flattened corner of the IC socket is oriented with the matching flattened corner marking on the PCB. You can also now insert IC3 and IC4 into their sockets, taking care of orientation.

4.9 C3 (10pF)

C4 (15pF)

X1 (32.768KHz Crystal)

4.10 First Tube test

Now it is time to make a first test of the tube drive circuit. Start by replacing the HV module, and also if you removed IC2, place this back in its socket. Also now insert IC3 and IC4 into the sockets, taking great care the flat at one corner of the IC matches the flat on the IC socket.

This is a good time to attach the six M3 X 15mm hex spacers, so the PCB will sit neatly during the tube test.

With great care, and looking carefully at tube alignment (tube faces forwards), insert six IN-18 Nixie Tubes into the sockets. Power up the PCB, and watch the tubes. They should count 0 through to 9 and back to 0 again, and repeat this sequence. If any digits or tubes do not light, go back and check your work. If any tube does not light, swap it with a known working tube to check if it is the tube or the location that is faulty.

Once all is well, power off, carefully remove the tubes, and with care remove the HV module.

4.11 R8 – R11 (4 X 270 K Ω)

R12 – R14, R17 – R19 (6 X 270 Ω)

R16 (10 K Ω)

R20 (1 K Ω)


4.12 Q1 (MPSA42)

Q2 – Q4 (3 X 2N7000)

**4.13 C6 (0.22F)
C7 (100nF)
2 Way pin-header and jumper**

NOTE: C6 and the 2 Way jumper need to be soldered on the bottom side of the PCB if you are mounting the clock in the Visio or Stainless Steel Cases.

Take care that C6 is mounted with its arrows matching the arrows on the PCB.

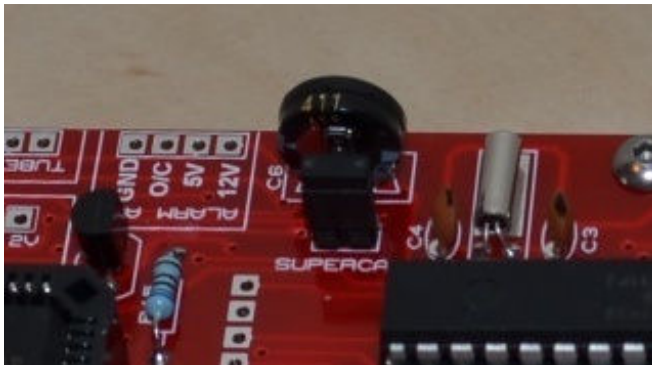

**4.14 D4, D6 (5mm Yellow LED)
D5 (5mm Green LED)
SET, ADJ, ALARM, DST (buttons)
GPS / RFT (3.5mm Jack socket)
PIR (3.5mm Jack socket)**

PLEASE READ THIS SECTION CAREFULLY, IF YOU ARE USING ONE OF OUR CASES.

VISIO AND PRISMA CASE:

For our Visio and Prisma cases, mount all these components on the top (tube) side of the PCB as shown below.

The longer lead on the LEDs goes in the hole marked +.



STAINLESS STEEL CASE:

Solder the two jack sockets and four switches on the BOTTOM of the PCB (non-tube side). Do not solder the three LEDs at this stage. This is covered in the guide to the Stainless Steel Case.

To solder the GPS / RFT and PIR connectors: First wet one pad on the PCB with solder. Then place the connector in position and re-touch the pad with the soldering iron. This will anchor the component and then you can solder the remaining pads.


4.15 LS1 (Piezo Buzzer)

The Piezo Buzzer is soldered on the bottom of the PCB.


4.16 RGB LEDs


There are 6 RGB LEDs, one under each Nixie Tube. Note that there are a further 2 locations for RGB LEDs under the neon colon separators. These are not supplied and not installed, because the RGB lighting from the tube LEDs provides sufficient illumination of the colon neons.

Start by bending the leads of each RGB LED as shown below, noting the orientation of the longest lead.

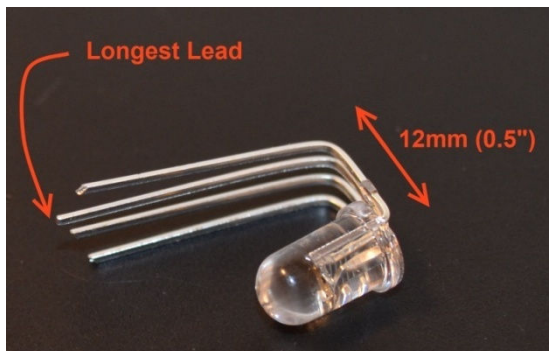

If you follow the bending instructions above, then the longest lead should go into the hole marked with 2 small circles at each RGB LED location. Solder each LED and clip the leads short.

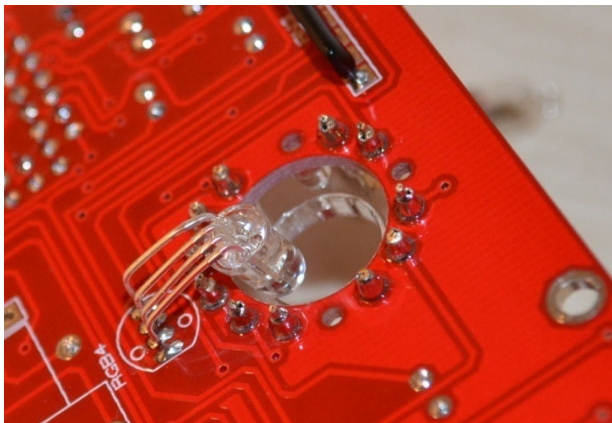


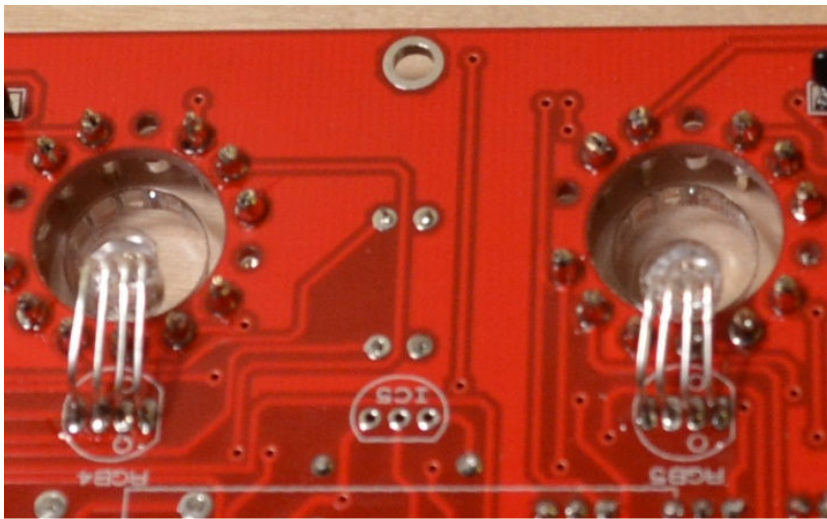

4.17 IC5 (DS18B20 temperature sensor)

NOTE: If you are using our stainless steel case, do not solder this part yet.


The temperature sensor looks like a transistor, however it is an IC. It needs to be soldered at the rear of the PCB, as far from the PCB as possible. Just push the leads a very short distance into the holes on the PCB, bend over and solder as shown:

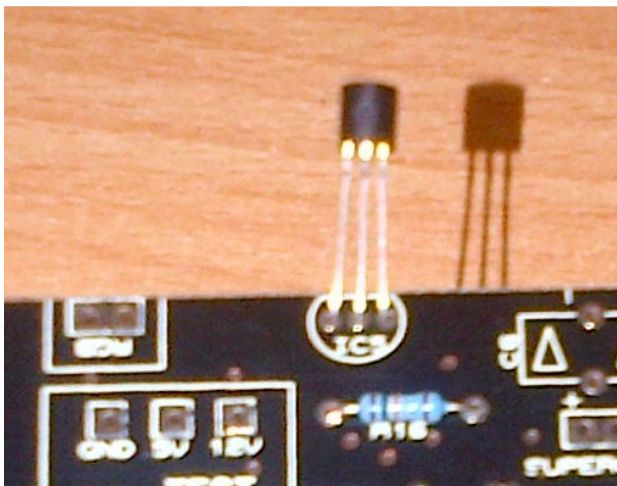


4.18 AM1, AM2, PM1, PM2 (4 X 4mm Neon lamps)

Each neon is separately addressable, and many flashing and indication modes are implemented – see the configuration setup later in the manual.

The AM1 and PM1 neons are taller, and mounted on the rear 2 locations. The leads of the two rear neons need to be extended. Use pieces of wire cut from leads of resistors to extend the wires so they are at least 500 (2") long:

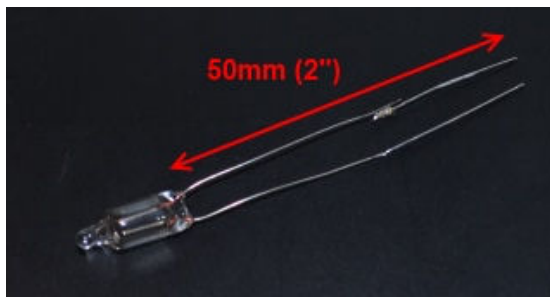


Next, cut the clear heat shrink tubing into 8 lengths: 4 lengths of 20mm and 4 lengths of 45mm:

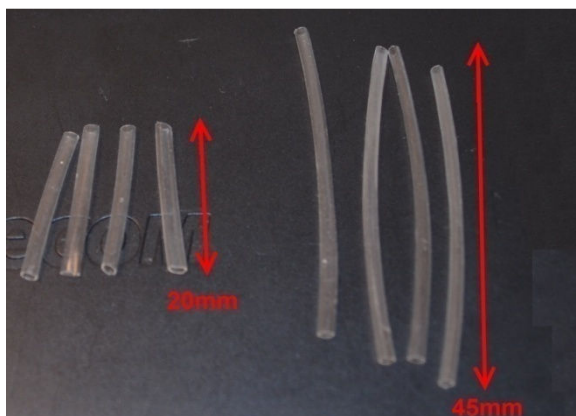

Slip the insulation over the neon lamp leads and with a hot air gun, shrink the tubing:



Finally, solder the neons in place on the PCB, with the taller neons at the back. The glass cover tubes can be placed over later.

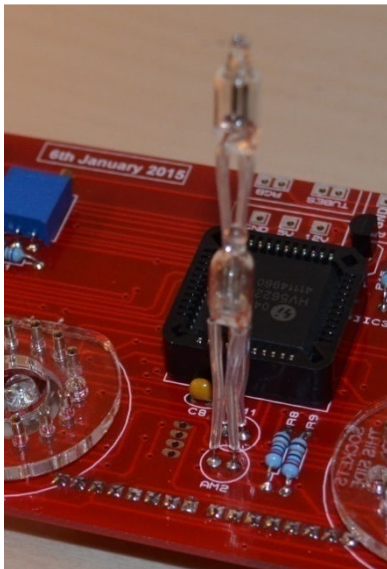

5. HOW TO OPERATE THE CLOCK

The four buttons have the following functions:

SET: Exit tube test routine on cold power-up;

 Show date;

 Set time and date;

 Enter configuration menu;

ADJ: Call DCF / MSF;

 Adjust: time, date, alarm time, configuration parameters;

ALARM: Set alarm time; snooze; cancel snooze/alarm;

DST: Toggle between DST and Standard Time (+/- 1 Hour)

 Enter colour setup menu; scroll through colour / time options

Entering configuration mode:

The principal settings of the clock are stored in flash memory – your preferred configuration is stored even after powering off the clock for extended periods. To access the configuration mode press and hold the 'SET' button. After 2 seconds the seconds will become highlighted. Continue holding the button a further 2 seconds until the clock displays in this format:

00-XX-99. The '99' in the seconds digits tells you that you are in the configuration menu.

In configuration mode the hours digits display the current parameter being adjusted, and the minutes digits display the current value stored against the parameter.

For each parameter, and referring to the table below, scroll through the range of possible values by pressing the 'ADJ' button. When the desired value has been reached, move on to the next parameter by pressing the 'SET' button. When the last parameter has been set, pressing 'SET' one more time will revert the clock back to time display mode. The first parameter (0) cannot be changed as it is the software revision number. It will show for several seconds and then move to parameter 1.

In all correspondence on support issues, please quote the board type, revision date and software version.

Parameter	Description	Values
0	Software revision	20 = version 2.0, 12 = version 2.1 etc
1	12 / 24 Hr mode	0 - 12 Hr (default) 1 - 24 Hr
2	Date format	0 = MM.DD.YY (default) 1 = DD.MM.YY 2 = YY.MM.DD
3	Leading zero blanking eg. 01:54:32	0 - leading zero blanked (default) 1 - leading zero displayed
4	Night Mode start hour	0 - 23
5	Night Mode end hour	0 - 23
6	Night Mode	0 - Tubes off 1 - Dimmed display (default)
7	Master Blank start hour ¹	0 - 23
8	Master Blank end hour ¹	0 - 23
9	Master Blank days ¹	0 - Off (default) 1 - Weekdays 2 - Weekends 3 - All days
10	Colon neons mode	0 - Both off 1 - AM/PM Indication, left / right 2 - AM/PM Indication, left / right flashing 3 - AM/PM Indication, top / bottom 4 - AM/PM Indication, top / bottom flashing 5 - All slow flashing 6 - Slow flashing left / right 7 - All flashing 8 - Both illuminated 9 - Railroad fast 10 - Railroad slow
11	Colon neons during night dimmed mode ²	As per parameter 10
12	Radio time signal source	0 - No Radio Time source (default) ³ 1 - DCF 2 - not used 3 - MSF 4 - GPS
13	GPS Baud rate	0 - 4.8 Kbps 1 - 9.6 Kbps (default) 2 - 19.2 Kbps 3 - 38.4 Kbps
14	Radio time offset hours	0-13 (default 0) ⁴
15	Radio time offset mins	0-45 (default 0) ⁴
16	Radio time offset polarity	0 - Minus time (default) 1 - Plus time
17	PIR Motion Sensor Period	0 - No PIR installed (default) 1 - 15 seconds 2 - 30 seconds 3 - 1 minute 4 - 2 minutes 5 - 5 minutes 6 - 10 minutes

		7 – 15 minutes 8 – 20 minutes 9 – 30 minutes
18	Snooze period	0 – 6 minutes (default) 1 – 9 minutes 2 – 12 minutes 3 – 15 minutes
19	Reserved	
20	Time Calibration Factor	0 - 99 (each unit adjusts by 0.2s per day)
21	Time Calibration Polarity	0 - Make clock slower 1 - Make clock faster
22	Slots Mode ⁵	0 – Slots disabled 1 – Slots every minute 2 – Slots every 10 minutes (default) 3 – Slots every hour 4 – Slots at midnight
23	RFT Sync Mode ⁶	0 – DCF / MSF Sync once per day only as per parameter 24 (default) 1 – DCF / MSF Sync every hour
24	RFT Daily Sync Hour	0 – 23 (default 2)
25	RFT Seek Blanking	0 – Keep tubes lit for DCF / MSF seek 1 – Blank tubes for DCF / MSF seek (default)
26	Display Mode	0 – standard change of digits 1 – fading digits 2 – fading digits with scrollback effect (default)
27	Auto date display each minute	0 – Off 1 – Static display of date 2 – Scrolling display of date (default) ⁷
28	Night Mode Override minutes	0 – 50 (default 0 gives 15 seconds override) ⁸
29	Thermometer Settings	0 – Don't display temperature (default) 1 – Celsius display, every minute 2 – Celsius display, every 10 minutes 3 – Celsius display, every hour 4 – Fahrenheit display, every minute (default) 5 – Fahrenheit display, every 10 minutes 6 – Fahrenheit display, every hour
30	Thermometer offset	0 – 10 degrees ⁹
31	Restore default settings	0 – Keep user settings 1 – Restore original default settings ¹⁰

Notes:

1. Master Blanking Mode has priority over Night Mode. Use to disable the clock on weekends (eg clock is in office), or during office hours (eg clock is at home). Complete HV shutdown to save power and tube life.
2. Night time neons mode is active when night mode is set to dim. During night time blanking the tubes AND neons are disabled.
3. Clock is fully functional without DCF / MSF / GPS synchronisation. Set time manually.

4. Enter your time zone offset from the synchronisation source. Note that GPS transmits UTC.
5. Visual effect / cathode poisoning prevention – all digits on all tubes are cycled for 10 seconds. This setting overrides night blanking or dimming for the duration of the effect (10 seconds).
6. DCF / MSF synchronisation takes place on the hour. If no valid frame is received in 6 minutes, the clock reverts to normal operation.
7. Date will be displayed each minute between 50 and 55 seconds past the minute.
8. Press 'SET' briefly during Night Mode to show time for prescribed period.
9. Applies a fixed negative offset to the temperature display, to compensate for self-heating of the sensor.
10. Set this parameter to '1' to restore factory configuration settings. Internal operations will then load all the original settings and restore the value to '0' You can also restore factory configuration settings by pressing and holding 'SET' as you power up from a cold start. A cold start is a startup with a fully discharged Supercapacitor, or with the Supercapacitor jumper removed.

Setting the Time and Date:

Before setting the time, press 'DST' briefly to toggle between DST and standard time modes. Set according to whether you are currently in DST time or not. The adjacent DST LED will light or extinguish accordingly.

From time display mode, press and hold 'SET' button for 2 seconds until the seconds digits are highlighted.

Press the 'ADJ' button to reset seconds to zero.

Briefly Press 'SET' again and the hours will be highlighted

Press the 'ADJ' button to set the minutes.

Briefly Press 'SET' again and the hours will be highlighted.

Press the 'ADJ' button to set the hours.

Proceed in this fashion to set the calendar: Year, Month and Day.

Finally, briefly Press 'SET' again to revert to normal clock operation.

Showing Date:

From time display mode, briefly press 'SET' button. Date will be shown for 5 seconds, then revert to time display.

Auto Date Display:

Setting parameter (27) to 1 or 2 will enable auto display of date between 50 and 55 seconds past each minute.

Night Blanking Override:

During programmed night blanking, the blanking may be overridden to see the time by briefly pressing the 'SET' button. Tubes will remain lit for the period defined in parameter (28).

Manual RFT Call:

In DCF / MSF modes, pressing 'ADJ' briefly during time display will initiate a manual time seek for maximum 6 minutes, or until a valid time frame is received.

Setting Alarm:

Press the 'ALARM' Button. The seconds digits show the on / off status of the alarm: 00 (off) or 01 (on).

Set on / off status, then minutes followed by hours by using the 'ALARM' and 'ADJ' buttons. When set, the alarm LED will also light.

Cancelling Alarm:

Press 'ALARM' briefly to cancel alarm and enter snooze mode, or a longer press until the clock beeps, to cancel snooze. Alarm remains set for the next day.

Rapid DST Adjustment

Press 'DST' briefly to toggle between DST and standard time. The indicator shows whether DST mode is active or not. If time has been synchronised from DCF or MSF sources, this light will be set or cleared automatically. It can still be manually overridden, however the system will re-set the DST status again at the next valid time sync.

Note, that GPS time data does not contain DST information, so the DST status will need to be set manually in GPS sync mode as well as manual time-set mode.

Calibration of Timekeeping Accuracy

Over time you may observe the clock runs faster or slower than an accurate time standard. You can finely adjust the timekeeping by setting configuration parameters 20 and 21. We recommend to precisely set the clock against a known accurate clock, and then record the time drift in seconds after 5 full days (120 hours). Program this value into parameter 20.

Set parameter 21 to 0 to slow down the clock and to 1 to speed up the clock.


6. CONFIGURING THE RGB LED TUBE LIGHTS

The clock features a separate and dedicated setup menu for the RGB LED lights, accessed from the 'DST' button. All settings are stored to non-volatile memory, so your favourite colours will still be there after even a long power off.

You can set fixed colours and intensities, or program an auto colour cycling effect at your choice of speed.


6.1 Entering RGB LED menu

Press and hold the 'DST' button until the display shows: 00: 0:00. NX3 will not be lit.

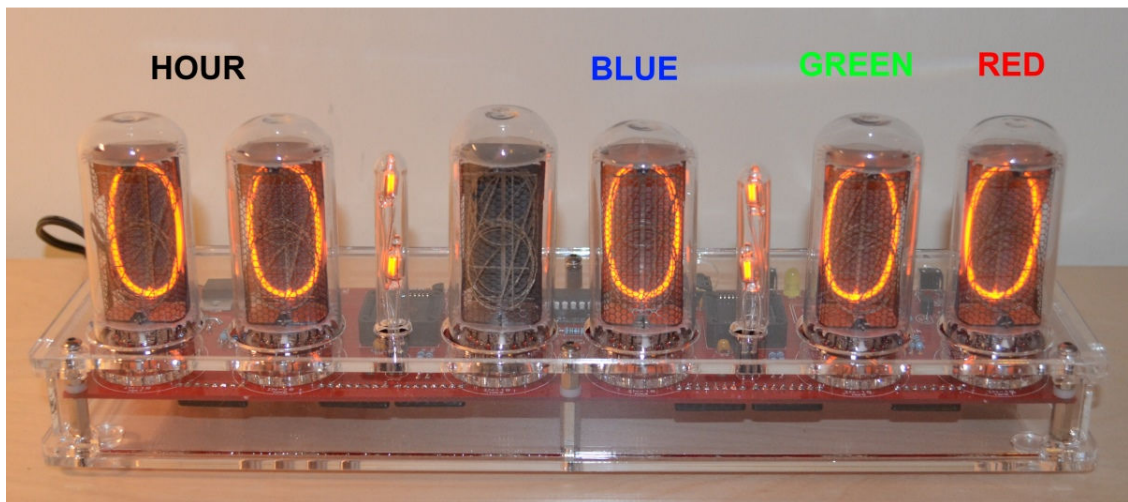


- For each hour (0-23), you can set a custom colour
- Each custom colour can have your choice of **BLUE**, **GREEN** and **RED** values from 0 (colour off) to 8 (maximum brightness)
- Mix the colours using the **ALARM**, **ADJ**, **SET** buttons.
- Use low values (1,2 and 3) for low brightness, eg. For night time
- Set the value to '0' for that colour to be off
- Once you are happy with the colour for that hour, press 'DST' to move to the next hour
- Have fun playing with your favourite colours and intensities!

- Colours are displayed live during RGB menu:

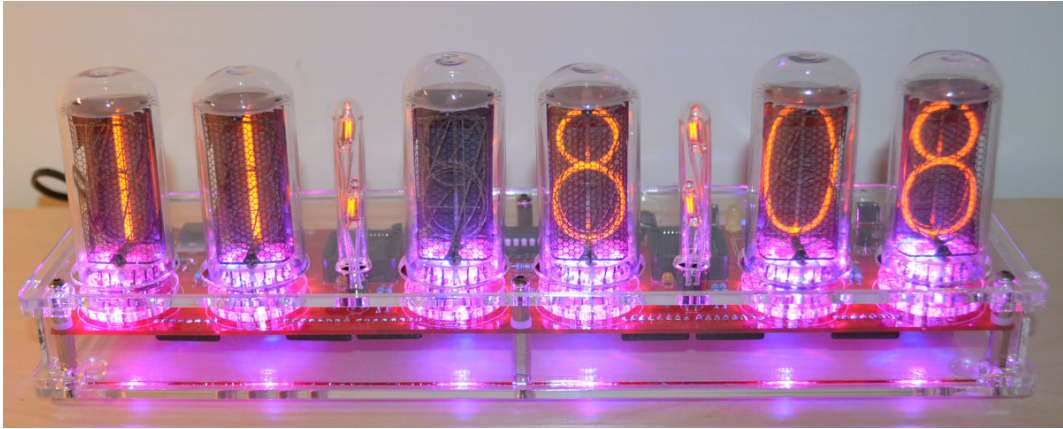

- In the example above, between 11 and 12 hours, the LEDs will be purple (8 red, 0 green and 8 blue)
- In the example below, between 19 and 20 hours, the LEDs will be blue with a hint of green (0 red, 2 green and 8 blue)

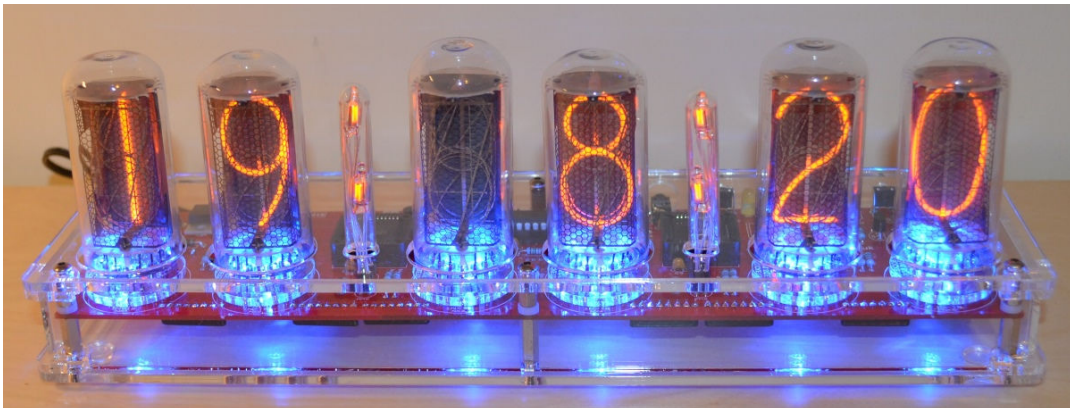

6.2 Setting auto colour cycling


Setting colour **RED** to value 9 has a special meaning:

This will enable auto colour cycling for the specified hour. The speed of the cycling will then be governed by the **GREEN** value:

0 = very slow change

9 = very fast change

This auto colour cycling mode is explained in the picture below:

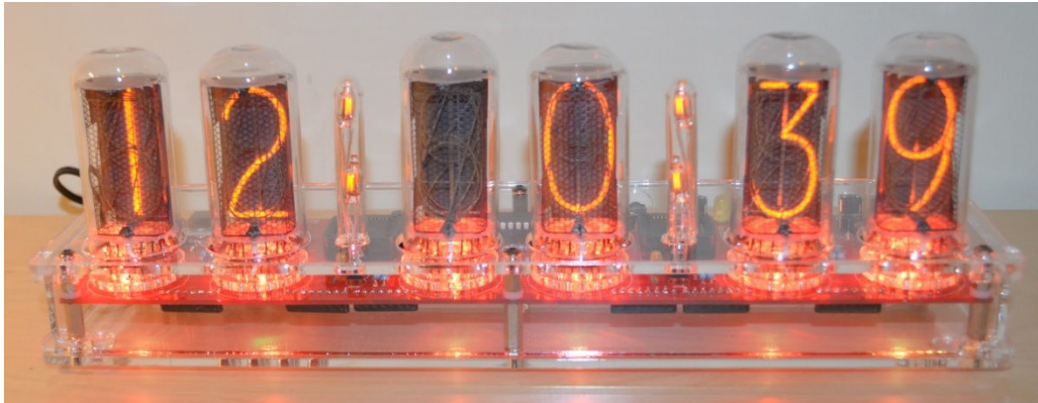

Red = 9, therefore Auto Colour Cycling is enabled for 12-13 hours

Green = 3, so speed is 3.

Blue value has no effect.

Note: The colours do not cycle live during Auto Colour Cycling setup. The cycling starts only during normal time and date display.

7. USING A RADIO FREQUENCY TIME RECEIVER OR GPS RECEIVER

The clock can automatically synchronise time from DCF (Europe), and MSF (UK) long wave time transmitters.

The clock can also receive time from a GPS receiver that transmits information using NMEA-0183 protocol, using the \$GPRMC sentence.

7.1 Configuring for RFT or GPS Synchronisation.

- Set parameter 12:
 - 1: DCF
 - 2: unused
 - 3: MSF
 - 4: GPS
- If using GPS, set the baud rate in parameter (13)
- Set parameters 14 and 15 for the hours and minutes your time zone is offset from the synchronisation source. This is usually only whole hours. Examples:
 - UK is 1 hour offset from the time transmitted by the DCF transmitter
 - France has no offset from the time transmitted by the DCF transmitter
- Set parameter (16) to identify whether the offset is minus (0) or positive (1) of the time source.
- Set parameter (23) to select between hourly seek and daily seek in DCF / MSF modes.
- If you have selected daily seek, use parameter (24) to set the time of the daily seek in DCF / MSF modes.
- If you intend to place the RFT receiver module closer to the clock PCB than 6 ft / 2 metres, the clock will need to disable HV and switch off the tubes for time seek, otherwise the switch-mode power supply will prevent reception. Select blanking during time seek by setting parameter (25) to 1.

7.2 Connecting a Radio Time receiver

The clock has been designed for, and tested with our Radio Frequency Time (RFT) Receiver Modules. (available separately from PV Electronics).



DCF Module: For receiving time signals from transmitter at Frankfurt, Germany. Reception is possible within a 2000Km radius of Frankfurt.

MSF Module: For receiving time signals from the transmitter at Anthorn, UK. Reception is possible within the UK, Eire, Northern France, and Norway.

Please note:



1. The long wave signals propagate further at night, so the clock is configured by default to synchronize at 2am.
2. Suitable Power Supplies: If using a switching power supply, it must have an earth connection. Cheap Chinese switching adapters cause too much interference and will not work. Alternatively use an old-fashioned transformer type AC to DC adapter.
3. The time signals are intended that a receiving clock may collect time data intermittently. The signal strength and fidelity is not like a 'TV Signal', where one can get a perfect signal any time at will.

7.3 Setting Up for First Reception.

1. Ensure the correct setting has been applied to Config 12:
 1 = DCF
 3 = MSF
2. For the first tests, ensure Config 25 is set to value 1, to make the HV converter switch off for synchronisation. This stops any noise created by the HV converter.
3. Set Config 14 - 17 for your location's time zone offset from the transmitter.
4. Connect the receiver, and place horizontally by a window, broadside on to the transmitter as far as is possible.
5. Wait until after dark, and preferable the early hours.
6. Command a manual seek, by pressing the middle 'Adj' button. The tubes should switch off. The LED on the receiver module will now not be affected by the HV converter, and after 15-30 seconds start to flash regularly, showing the one pulse per second data from the transmitter.
If your Module's red LED does not start to flash regularly, go back and check 1-6. of this section. If the red LED does not flash regularly, you will not get synchronisation!
7. At the start of the minute, the clock should start collecting data, and if so it will start flashing the green LED rapidly. Look for any LED activity at the start of the minute, using a known time source as the reference.
8. After 60 seconds of gathering data, the clock will illuminate the green LED, set the time and switch the tubes back on.
9. Once the system has been seen to work correctly, you can experiment with the antenna in different locations, and it may be possible to have the tubes stay on for time synchronisation.
10. Many other electrical appliances such as TVs and mobile phones reception when in close proximity. Metal objects cause reception problems too Place and design your case so the antenna is as far away from the PCB as possible.

7.4 Connecting a GPS receiver

The clock has been designed for, and tested with our Micro GPS Receiver (available separately from PV Electronics)

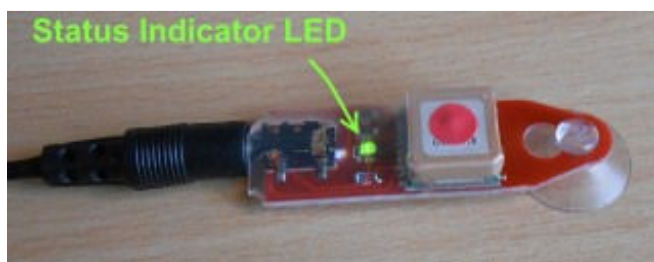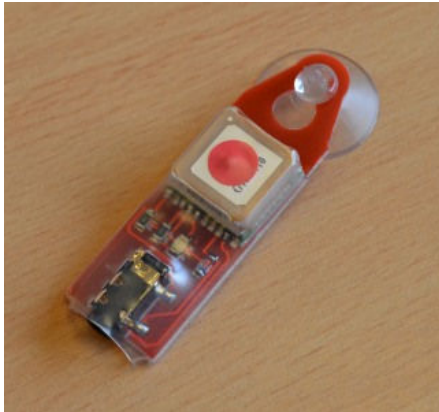

7.5 Function of the GPS / RFT indicator LED (D5):


- *No Radio Synchronisation source installed (parameter (12) = 0)*
LED is permanently off
- *RFT or GPS Synchronisation enabled (parameter (12) = 1-4)*
The LED will be ON if the clock has synchronised in the last two hours; slowly flashing if the last synchronisation was between 2 hours and 24 hours ago; and off if the last synchronisation is older than 24 hours.
- If DCF or MSF mode is selected, the indicator will flash rapidly whilst the clock is actually receiving and processing a valid time frame.
- Additionally, the indicator will flash very briefly each second whilst seeking a RFT frame.

The function of the RFT indicator LED may be summarised in the table below:

Radio Time Source	Sync < 2 Hrs	Sync > 2 Hrs Sync < 24 Hrs	Sync > 24 Hrs	Seeking RFT Frame	Aquiring RFT Frame
None	Off	Off	Off	-	-
DCF / MSF	On	Slow Flash	Off	Intermittent Flash	Fast Flash
GPS	On	Slow Flash	Off	-	-

8. PIR MOTION SENSOR

The clock has a 3.5mm Jack Plug socket for connection of our PIR Motion Sensor Accessory, available separately as a quick – build kit. This useful accessory helps save tube life and power by powering down the clock when it senses the room is empty. The sensing range is typically up to 12 ft (3.5 metres)

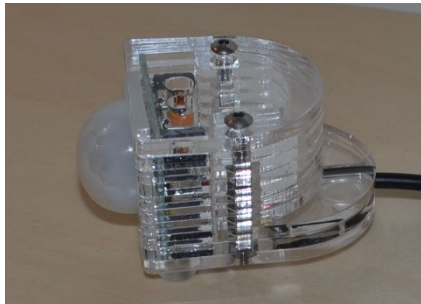

When installed and configured (configuration parameter 17), the sensor will sense motion in the room, and switch off the High Voltage generator, tubes and RGB LEDs when the PIR time period has expired.

Configuration Parameter 17: 0 – No PIR installed (default)
1 – 15 seconds
2 – 30 seconds
3 – 1 minute
4 – 2 minutes
5 – 5 minutes
6 – 10 minutes
7 – 15 minutes
8 – 20 minutes
9 – 30 minutes

It is important to remember that the function does not override Night Blanking and Master Blanking, so when the clock is in Night Blanking or Master Blanking, no amount of waving around in front of the sensor will light the tubes! If you are using the PIR motion sensor, the Night Blanking and Master Blanking periods are rather redundant, so it is recommended to not use these if you have the PIR installed.

The suggested initial PIR period is 10 minutes (Config 17 = 6).

9. RGB LED OVERRIDE


Pads are provided at the rear of the PCB to allow a user to connect a remote switch for switching off the RGB LEDs.

Shorting the two 'RGB' pads will switch off the RGB LEDs.

This is an advanced feature. If you require further information, please send us an email.

The diagram illustrates a smart alarm system using a PIC16F1936 microcontroller. The system includes the following components and connections:

- Power Supply:** A 12V IN source is connected to a 12V regulator (R18, R17, R19, R20) and a 5V regulator (R14, R13, R12, R11, R10, R9, R8, R7, R6, R5, R4, R3, R2, R1). A 5.2V regulator (R16) is also present. A fuse (FUSE 1000mA) is connected to the 12V IN source.
- Microcontroller (PIC16F1936):** The PIC is connected to the power supply and various modules. Key pins include:
 - Power: VDD (pin 1), VSS (pin 18), VDD (pin 20), VSS (pin 21).
 - GPIO: RB0 (pin 22), RB1 (pin 23), RB2 (pin 24), RB3 (pin 25), RB4 (pin 26), RB5 (pin 27), RB6 (pin 28), RB7 (pin 29), RB8 (pin 30), RB9 (pin 31), RB10 (pin 32), RB11 (pin 33), RB12 (pin 34), RB13 (pin 35), RB14 (pin 36), RB15 (pin 37), RB16 (pin 38), RB17 (pin 39), RB18 (pin 40), RB19 (pin 41), RB20 (pin 42), RB21 (pin 43), RB22 (pin 44), RB23 (pin 45), RB24 (pin 46), RB25 (pin 47), RB26 (pin 48), RB27 (pin 49), RB28 (pin 50), RB29 (pin 51), RB30 (pin 52), RB31 (pin 53), RB32 (pin 54), RB33 (pin 55), RB34 (pin 56), RB35 (pin 57), RB36 (pin 58), RB37 (pin 59), RB38 (pin 60), RB39 (pin 61), RB40 (pin 62), RB41 (pin 63), RB42 (pin 64), RB43 (pin 65), RB44 (pin 66), RB45 (pin 67), RB46 (pin 68), RB47 (pin 69), RB48 (pin 70), RB49 (pin 71), RB50 (pin 72), RB51 (pin 73), RB52 (pin 74), RB53 (pin 75), RB54 (pin 76), RB55 (pin 77), RB56 (pin 78), RB57 (pin 79), RB58 (pin 80), RB59 (pin 81), RB60 (pin 82), RB61 (pin 83), RB62 (pin 84), RB63 (pin 85), RB64 (pin 86), RB65 (pin 87), RB66 (pin 88), RB67 (pin 89), RB68 (pin 90), RB69 (pin 91), RB70 (pin 92), RB71 (pin 93), RB72 (pin 94), RB73 (pin 95), RB74 (pin 96), RB75 (pin 97), RB76 (pin 98), RB77 (pin 99), RB78 (pin 100), RB79 (pin 101), RB80 (pin 102), RB81 (pin 103), RB82 (pin 104), RB83 (pin 105), RB84 (pin 106), RB85 (pin 107), RB86 (pin 108), RB87 (pin 109), RB88 (pin 110), RB89 (pin 111), RB90 (pin 112), RB91 (pin 113), RB92 (pin 114), RB93 (pin 115), RB94 (pin 116), RB95 (pin 117), RB96 (pin 118), RB97 (pin 119), RB98 (pin 120), RB99 (pin 121), RB100 (pin 122), RB101 (pin 123), RB102 (pin 124), RB103 (pin 125), RB104 (pin 126), RB105 (pin 127), RB106 (pin 128), RB107 (pin 129), RB108 (pin 130), RB109 (pin 131), RB110 (pin 132), RB111 (pin 133), RB112 (pin 134), RB113 (pin 135), RB114 (pin 136), RB115 (pin 137), RB116 (pin 138), RB117 (pin 139), RB118 (pin 140), RB119 (pin 141), RB120 (pin 142), RB121 (pin 143), RB122 (pin 144), RB123 (pin 145), RB124 (pin 146), RB125 (pin 147), RB126 (pin 148), RB127 (pin 149), RB128 (pin 150), RB129 (pin 151), RB130 (pin 152), RB131 (pin 153), RB132 (pin 154), RB133 (pin 155), RB134 (pin 156), RB135 (pin 157), RB136 (pin 158), RB137 (pin 159), RB138 (pin 160), RB139 (pin 161), RB140 (pin 162), RB141 (pin 163), RB142 (pin 164), RB143 (pin 165), RB144 (pin 166), RB145 (pin 167), RB146 (pin 168), RB147 (pin 169), RB148 (pin 170), RB149 (pin 171), RB150 (pin 172), RB151 (pin 173), RB152 (pin 174), RB153 (pin 175), RB154 (pin 176), RB155 (pin 177), RB156 (pin 178), RB157 (pin 179), RB158 (pin 180), RB159 (pin 181), RB160 (pin 182), RB161 (pin 183), RB162 (pin 184), RB163 (pin 185), RB164 (pin 186), RB165 (pin 187), RB166 (pin 188), RB167 (pin 189), RB168 (pin 190), RB169 (pin 191), RB170 (pin 192), RB171 (pin 193), RB172 (pin 194), RB173 (pin 195), RB174 (pin 196), RB175 (pin 197), RB176 (pin 198), RB177 (pin 199), RB178 (pin 200), RB179 (pin 201), RB180 (pin 202), RB181 (pin 203), RB182 (pin 204), RB183 (pin 205), RB184 (pin 206), RB185 (pin 207), RB186 (pin 208), RB187 (pin 209), RB188 (pin 210), RB189 (pin 211), RB190 (pin 212), RB191 (pin 213), RB192 (pin 214), RB193 (pin 215), RB194 (pin 216), RB195 (pin 217), RB196 (pin 218), RB197 (pin 219), RB198 (pin 220), RB199 (pin 221), RB200 (pin 222), RB201 (pin 223), RB202 (pin 224), RB203 (pin 225), RB204 (pin 226), RB205 (pin 227), RB206 (pin 228), RB207 (pin 229), RB208 (pin 230), RB209 (pin 231), RB210 (pin 232), RB211 (pin 233), RB212 (pin 234), RB213 (pin 235), RB214 (pin 236), RB215 (pin 237), RB216 (pin 238), RB217 (pin 239), RB218 (pin 240), RB219 (pin 241), RB220 (pin 242), RB221 (pin 243), RB222 (pin 244), RB223 (pin 245), RB224 (pin 246), RB225 (pin 247), RB226 (pin 248), RB227 (pin 249), RB228 (pin 250), RB229 (pin 251), RB230 (pin 252), RB231 (pin 253), RB232 (pin 254), RB233 (pin 255), RB234 (pin 256), RB235 (pin 257), RB236 (pin 258), RB237 (pin 259), RB238 (pin 260), RB239 (pin 261), RB240 (pin 262), RB241 (pin 263), RB242 (pin 264), RB243 (pin 265), RB244 (pin 266), RB245 (pin 267), RB246 (pin 268), RB247 (pin 269), RB248 (pin 270), RB249 (pin 271), RB250 (pin 272), RB251 (pin 273), RB252 (pin 274), RB253 (pin 275), RB254 (pin 276), RB255 (pin 277), RB256 (pin 278), RB257 (pin 279), RB258 (pin 280), RB259 (pin 281), RB260 (pin 282), RB261 (pin 283), RB262 (pin 284), RB263 (pin 285), RB264 (pin 286), RB265 (pin 287), RB266 (pin 288), RB267 (pin 289), RB268 (pin 290), RB269 (pin 291), RB270 (pin 292), RB271 (pin 293), RB272 (pin 294), RB273 (pin 295), RB274 (pin 296), RB275 (pin 297), RB276 (pin 298), RB277 (pin 299), RB278 (pin 300), RB279 (pin 301), RB280 (pin 302), RB281 (pin 303), RB282 (pin 304), RB283 (pin 305), RB284 (pin 306), RB285 (pin 307), RB286 (pin 308), RB287 (pin 309), RB288 (pin 310), RB289 (pin 311), RB290 (pin 312), RB291 (pin 313), RB292 (pin 314), RB293 (pin 315), RB294 (pin 316), RB295 (pin 317), RB296 (pin 318), RB297 (pin 319), RB298 (pin 320), RB299 (pin 321), RB300 (pin 322), RB301 (pin 323), RB302 (pin 324), RB303 (pin 325), RB304 (pin 326), RB305 (pin 327), RB306 (pin 328), RB307 (pin 329), RB308 (pin 330), RB309 (pin 331), RB310 (pin 332), RB311 (pin 333), RB312 (pin 334), RB313 (pin 335), RB314 (pin 336), RB315 (pin 337), RB316 (pin 338), RB317 (pin 339), RB318 (pin 340), RB319 (pin 341), RB320 (pin 342), RB321 (pin 343), RB322 (pin 344), RB323 (pin 345), RB324 (pin 346), RB325 (pin 347), RB326 (pin 348), RB327 (pin 349), RB328 (pin 350), RB329 (pin 351), RB330 (pin 352), RB331 (pin 353), RB332 (pin 354), RB333 (pin 355), RB334 (pin 356), RB335 (pin 357), RB336 (pin 358), RB337 (pin 359), RB338 (pin 360), RB339 (pin 361), RB340 (pin 362), RB341 (pin 363), RB342 (pin 364), RB343 (pin 365), RB344 (pin 366), RB345 (pin 367), RB346 (pin 368), RB347 (pin 369), RB348 (pin 370), RB349 (pin 371), RB350 (pin 372), RB351 (pin 373), RB35

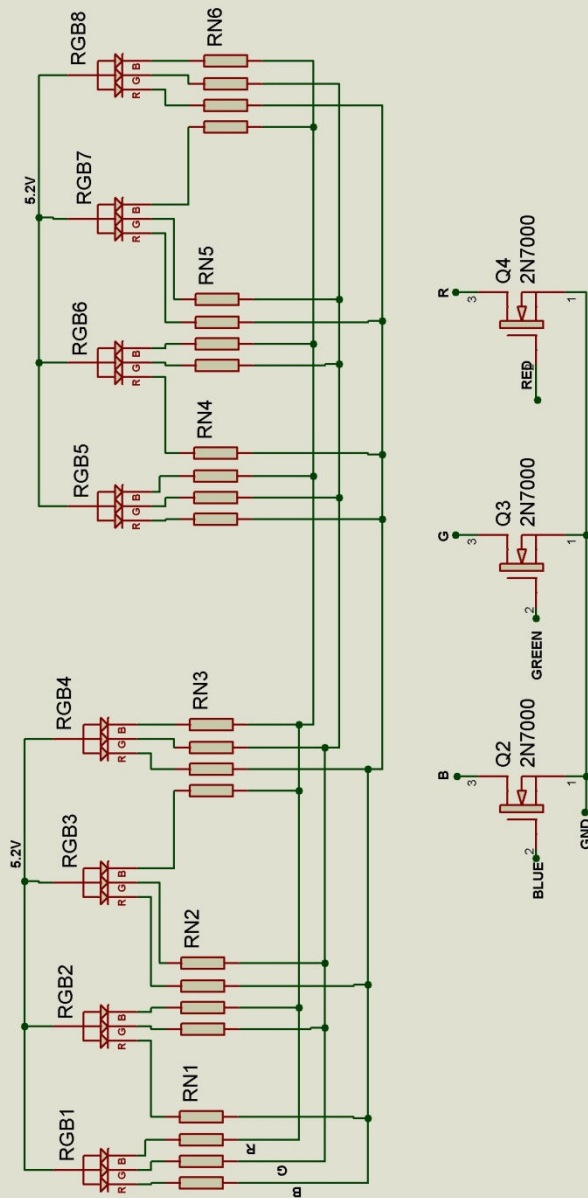

RGB LEDs

