


User Guide

Nixie Clock Type 'Nixie Maestro'

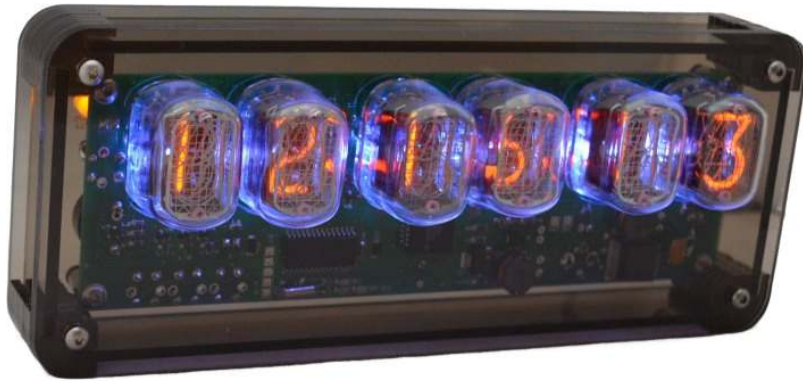

REVISION HISTORY

Issue Number	Date	Reason for Issue
1	22 November 2012	New document



1. INTRODUCTION

1.1 Nixie Maestro - Features

Nixie clock type 'Nixie Maestro' has the following features:

- Hours, Minutes and Seconds display
- 12 or 24 hour modes
- Uses a Quartz Crystal Oscillator as the timebase
- Programmable leading zero blanking
- Date display in either DD.MM.YY or MM.DD.YY or YY.MM.DD format
- Programmable date display each minute
- Scrolling display of date or standard display
- Alarm, with programmable snooze period
- Optional GPS synchronisation with status indicator LED
- Dedicated DST button to switch between DST and standard time
- Supercapacitor backup. Keeps time during short power outages
- Simple time setting using two buttons
- Programmable leading zero blanking
- Five programmable neon colon settings (Flashing AM/PM indication, illuminated AM/PM indication, both flashing, both on, both off)
- Seconds can be reset to zero to precisely the set time
- Programmable night mode - blanked or dimmed display to save tubes or prevent sleep disturbance
- Rear Indicator LEDs dim at night to prevent sleep disturbance
- Weekday aware 'Master Blank' function to turn off HV/ tubes on weekends or during working hours
- Separate modes for colon neons during night mode
- Standard or fading change of digits
- Standard, fading, or fading with scrollback display modes
- 'Slot Machine' Cathode poisoning prevention routine
- Programmable RGB tube lighting - select YOUR favourite colour palette
- 729 colours possible. Have a different colour or your choosing every hour, or autochanging colours. Your choice
- Not AC frequency dependent - works in all countries
- All user preferences stored to non-volatile memory



2. POWER SUPPLY

You will need to provide a suitable regulated power supply:

- 500mA or more current capability
- 12V DC
- 5.5mm plug, with 2.1mm inner, centre positive.

A suitable power supply for USA, Canada, Japan and Australia is available in our web store:



3. HOW TO OPERATE THE CLOCK

The four buttons have the following functions:

SET: Exit tube test routine on cold power-up;

Show date;

Set time and date;

Enter configuration menu;

ADJ: Adjust: time, date, alarm time, configuration parameters;

ALARM: Set alarm time; snooze; cancel snooze/alarm;

DST: Toggle between DST and Standard Time (+/- 1 Hour)

Enter colour setup menu; scroll through colour / time options

Entering configuration mode:

The principal settings of the clock are stored in flash memory – your preferred configuration is stored even after powering off the clock for extended periods. To access the configuration mode press and hold the 'SET' button. After 2 seconds the seconds will become highlighted.

Continue holding the button a further 2 seconds until the clock displays in this format:

00-XX-99. The '99' in the seconds digits tells you that you are in the configuration menu.

In configuration mode the hours digits display the current parameter being adjusted, and the minutes digits display the current value stored against the parameter.

For each parameter, and referring to the table below, scroll through the range of possible values by pressing the 'ADJ' button. When the desired value has been reached, move on to the next parameter by pressing the 'SET' button. When the last parameter has been set, pressing 'SET' one more time will revert the clock back to time display mode. The first parameter (0) cannot be changed as it is the software revision number. It will show for several seconds and then move to parameter 1.

In all correspondence on support issues, please quote the board type, revision date and software version.



Parameter	Description	Values
0	Software revision	10 = version 1.0, 11 = version 1.1 etc
1	12 / 24 Hr mode	0 - 12 Hr (default) 1 - 24 Hr
2	Date format	0 = MM.DD.YY (default) 1 = DD.MM.YY 2 = YY.MM.DD (from V1.1 onwards)
3	Leading zero blanking eg. 01:54:32	0 - leading zero blanked (default) 1 - leading zero displayed
4	Night Mode start hour	0 - 23
5	Night Mode end hour	0 - 23
6	Night Mode	0 - Tubes off 1 - Dimmed display (default)
7	Master Blank start hour ¹	0 - 23
8	Master Blank end hour ¹	0 - 23
9	Master Blank days ¹	0 - Off 1 - Weekdays 2 - Weekends 3 - All days (default)
10	Colon neons mode	0 - AM/PM Indication, flashing 1 - AM/PM Indication, illuminated 2 - Both flash (default) 3 - Both illuminated 4 - Both off
11	Colon neons during night dimmed mode ²	0 - AM/PM Indication, flashing 1 - AM/PM Indication, illuminated 2 - Both flash 3 - Both illuminated (default) 4 - Both off
12	Radio time signal source	0 - No Radio Time source (default) ³ 1 - Reserved 2 - Reserved 3 - Reserved 4 - GPS
13	GPS Baud rate	0 - 4.8 Kbps (default) 1 - 9.6 Kbps 2 - 19.2 Kbps 3 - 38.4 Kbps
14	Radio time offset hours	0-13 (default 0) ⁴
15	Radio time offset mins	0-45 (default 0) ⁴
16	Radio time offset polarity	0 - Minus time (default) 1 - Plus time
17	Reserved - leave as 0	0
18	Snooze period	0 - 6 minutes (default) 1 - 9 minutes 2 - 12 minutes 3 - 15 minutes
19	Reserved - leave as 0	0
20	Time Calibration Factor	0 - 99 (each unit adjusts by 0.2s per day)
21	Time Calibration Polarity	0 - Make clock slower 1 - Make clock faster



22	Slots Mode ⁵	0 - Slots disabled 1 - Slots every minute 2 - Slots every 10 minutes (default) 3 - Slots every hour 4 - Slots at midnight
23	Reserved - leave as 0	0
24	Reserved - leave as 0	0
25	Reserved - leave as 0	0
26	Display Mode	0 - Standard change of digits 1 - Fading digits 2 - Fading digits with scrollback effect (default)
27	Auto date display each minute ⁶	0 - Off 1 - On 2 - On with scrolling effects (default)
28	Night Mode Override Period	0 - 50 (default 0 gives 15 seconds override) ⁷
29	Restore default settings	0 - Keep user settings 1 - Restore original default settings ⁸

Notes:

1. Master Blanking Mode has priority over Night Mode. Use to disable the clock on weekends (eg clock is in office), or during office hours (eg clock is at home). Complete HV shutdown to save power and tube life.
2. Night time neons mode is active when night mode is set to dim. During night time blanking the tubes AND neons are disabled.
3. Clock is fully functional without GPS synchronisation. Set time manually.
4. Enter your time zone offset from the synchronisation source. Note that GPS transmits UTC.
5. Visual effect / cathode poisoning prevention - all digits on all tubes are cycled for 10 seconds. This setting overrides night blanking or dimming for the duration of the effect (10 seconds).
6. Date will be displayed each minute between 50 and 55 seconds past the minute.
7. Press 'SET' briefly during Night Mode to show time for prescribed period.
8. Set this parameter to '1' to restore original default settings. Internal operations will then load all the original settings and restore the value to '0'



Setting the Time and Date:

From time display mode, press and hold 'SET' button for 2 seconds until the seconds digits are highlighted.

Press the 'ADJ' button to reset seconds to zero.

Briefly Press 'SET' again and the hours will be highlighted

Press the 'ADJ' button to set the minutes.

Briefly Press 'SET' again and the hours will be highlighted.

Press the 'ADJ' button to set the hours.

Proceed in this fashion to set the calendar: Year, Month and Day.

Finally, briefly Press 'SET' again to revert to normal clock operation.

Showing Date:

From time display mode, briefly press 'SET' button. Date will be shown for 5 seconds, then revert to time display.

Auto Date Display:

Setting parameter (18) to '1' will enable auto display of date between 50 and 55 seconds past each minute.

Night Blanking Override:

During programmed night blanking, the blanking may be overridden to see the time by briefly pressing the 'SET' button. Tubes will remain lit for the period defined in parameter (8).

Setting Alarm:

Press the 'ALARM' Button. The seconds digits show the on / off status of the alarm: 00 or 01 (off or on).

Set on / off status, then minutes followed by hours by using the 'ALARM' and 'ADJ' buttons. When set, the alarm LED will also light.

Cancelling Alarm:

Press 'ALARM' briefly to cancel alarm and enter snooze mode, or a longer press until the clock beeps, to cancel snooze. Alarm remains set for the next day.

Rapid DST Adjustment

Press 'DST' briefly to toggle between DST and standard time. The Indicator shows whether DST mode is active or not.

Note, that GPS time data does not contain DST information, so the DST status will need to be set manually in GPS sync mode as well as manual time-set mode.



Calibration of timekeeping accuracy

Over time you may observe the clock runs faster or slower than an accurate time standard. You can finely adjust the timekeeping by setting configuration parameters 20 and 21. We recommend to precisely set the clock against a known accurate clock, and then record the time drift in seconds after 5 full days (120 hours). Program this value into parameter 20.

Set parameter 21 to 0 to slow down the clock and to 1 to speed up the clock.




4. CONFIGURING THE RGB LED TUBE LIGHTS

The clock features a separate and dedicated setup menu for the RGB LED lights, accessed from the 'DST' button. All settings are stored to non-volatile memory, so your favourite colours will still be there after even a long power off.

You can set fixed colours and intensities, or program an auto colour cycling effect at your choice of speed.

4.1 Entering RGB LED menu

Press and hold the 'DST' button until the display shows: 00: 0:00. The first minutes tube will not be lit.

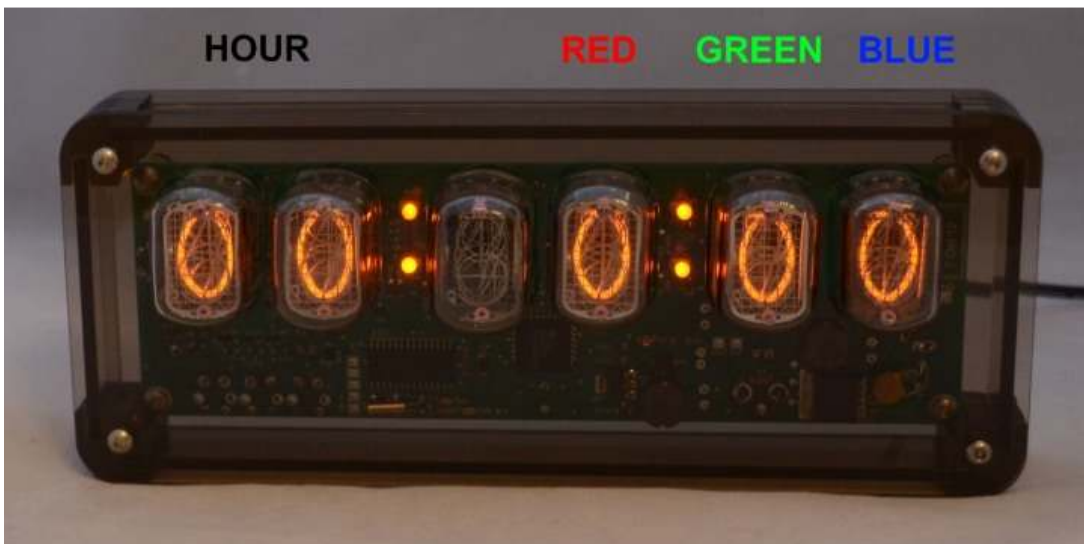

- For each hour (0-23), you can set a custom colour.
- Each custom colour can have your choice of RED, GREEN and BLUE values from 0 (colour off) to 8 (maximum brightness).
- Mix the colours using the SET, ADJ, ALARM buttons.
- Use low values (1,2 and 3) for low brightness, eg. For night time
- Set the value to '0' for that colour to be off.
- Once you are happy with the colour for that hour, press 'DST' to move to the next hour.
- Have fun playing with your favourite colours and intensities!



- Colours are displayed live during RGB menu:



- In the example above, between 8 and 9 hours, the LEDs will be purple (8 red, 0 green and 8 blue).
- In the example below, between 19 and 20 hours, the LEDs will be blue with a hint of green (0 red, 2 green and 8 blue).



4.2 Setting auto colour cycling

Setting colour **RED** to value 9 has a special meaning:

This will enable auto colour cycling for the specified hour. The speed of the cycling will then be governed by the **GREEN** value:

0 = very slow change

9 = very fast change

This auto colour cycling mode is explained in the picture below:



Red = 9, therefore Auto Colour Cycling is enabled for 12-13 hours.

Green = 3, so speed is 3.

Blue value has no effect.

Note: The colours do not cycle live during Auto Colour Cycling setup. The cycling starts only during normal time and date display.




5. USING A GPS TIME RECEIVER

5.1 Configuring for GPS Synchronisation.

- Set parameter 12 to value 4.
- If using our Micro GPS, ensure the baud rate in parameter (13) is value 0.
- Set parameters 14 and 15 for the hours and minutes your time zone is offset from UTC. This is usually only whole hours.
- Set parameter (16) to identify whether the offset is minus (0) or positive (1) of UTC.

The clock has been designed for, and tested with our Micro GPS Receiver (available separately from PV Electronics)

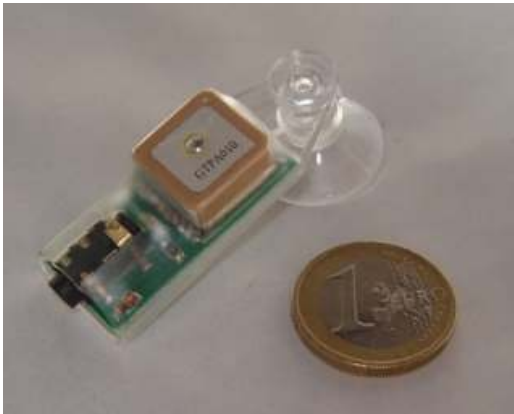

5.2 Function of the green GPS indicator

- *GPS Synchronisation not enabled (parameter (12) = 0)*
LED is permanently off.
- *GPS Synchronisation enabled (parameter (12) = 4)*
The LED will be ON if the clock has synchronised in the last two hours; slowly flashing if the last synchronisation was between 2 hours and 24 hours ago; and off if the last synchronisation is older than 24 hours.

